




ATC Service Desk

Tilt Switch Installation



Upgraded "Tilt" Switch Components

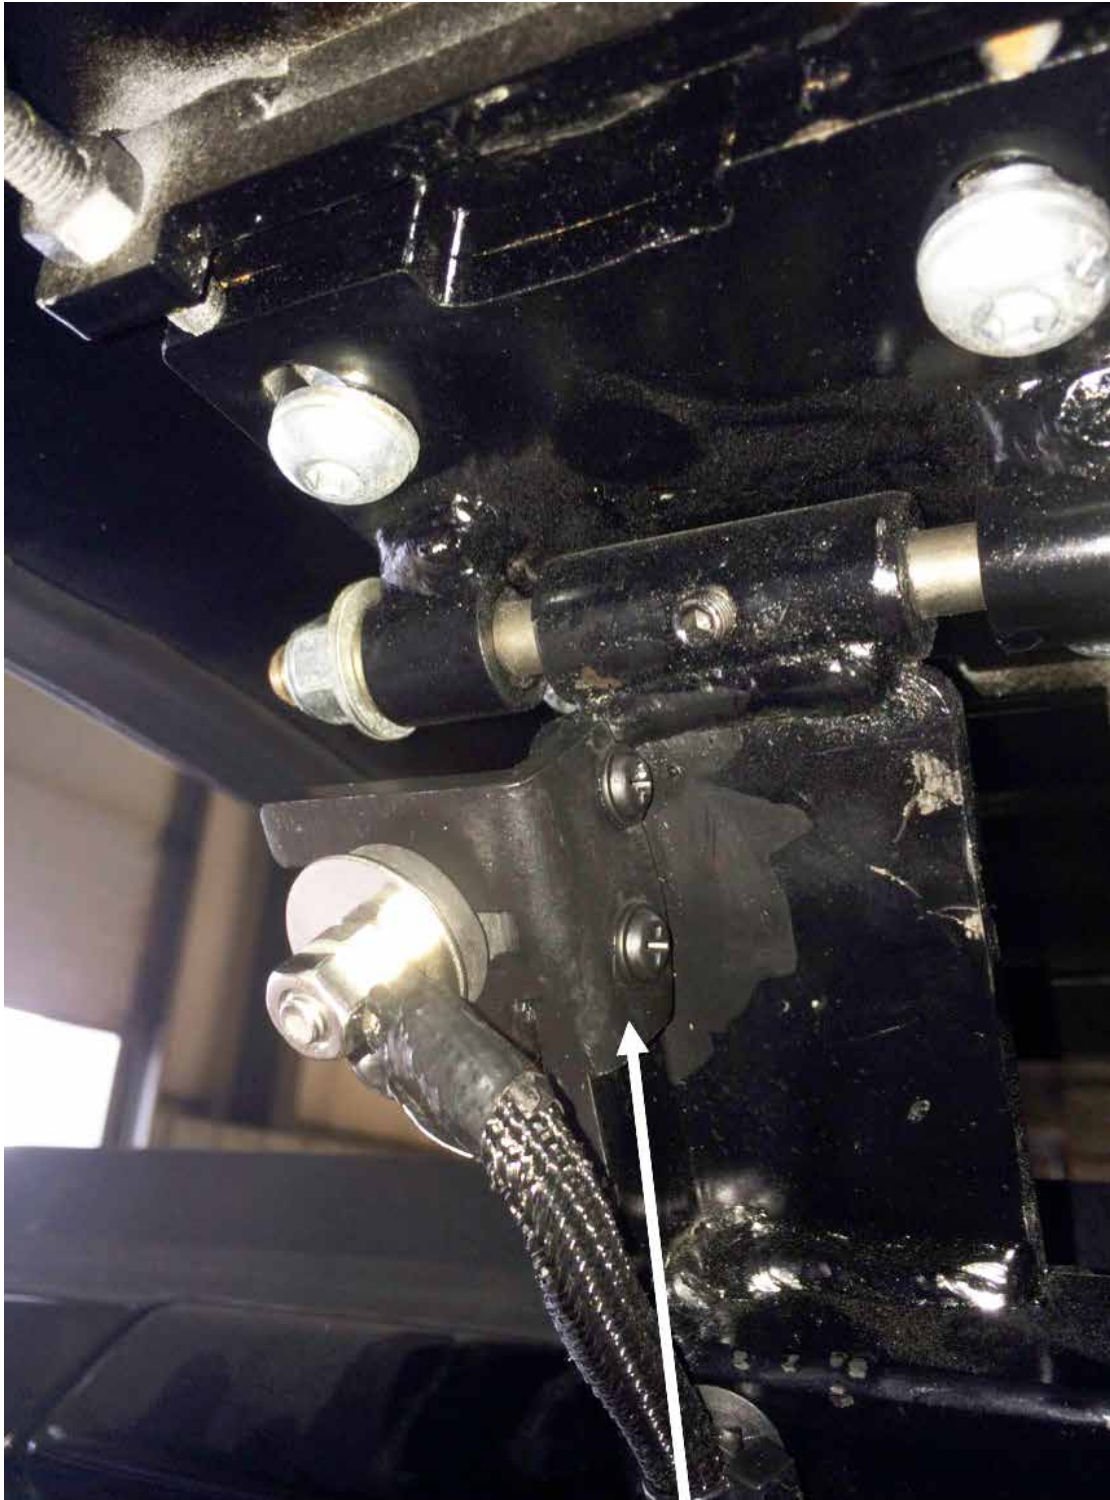

Tilt switch mounting location for passenger side application.
Arm must be pre-drilled before screw installation.



Switch mounting location.

Switch must contact hinge mount bolt as shown when closed.



Switch must be wired into harness inside of headliner. Purple with white stripe 18 ga. wire is ran to old switch. Terminate black with yellow stripe wire. Secure switch loom wire as shown. Hole must be drilled into crossmember.

Terminate old tilt switch wire. (Black with Yellow)